

Special Instructions for your NOKIA 6630



General Instructions

Powering On Your Phone

Press and hold <①> to turn your phone on and off. This key is located on the top, right side of your phone.

Answering Calls

To answer an incoming call, press <Call>.

The <+> Sign

The <+> sign is obtained on the NOKIA 6630 by pressing <*> twice, in succession.

Inserting/Removing SIM from Handset



1. With the back of the phone facing you, press the release button and slide the cover up and off. Remove the battery.



2. To release the SIM card holder, slide the holder to the right and open it. Insert/remove the SIM.



3. Replace the battery and phone cover to the back of the phone.

Manually Select a Network

NOTE: Not all networks support data services, customers using data services may need to manually select a network that supports data. Visit www.sprint.com/international for information on Data coverage, and a list of carriers which support data in the country you are traveling.

1. Press the **Menu** key
2. Select **Tools**
3. Select **Settings**
4. Select **Network**
5. Select **Operator** selection
6. Select **Manual** to manually select a network from the list